

# Z-LINE

## S203T / S203TA

Triple-Phase Network Analyzer / RS485 Modbus

Special modules



- ▶ INPUT: up to 600 Vac, 5 Arms (S203TA), 100mA (S203T)
- ▶ OUTPUT: N.1 channel current 0..20, 4..20 mA or voltage 0..5, 0..10 Vdc
- ▶ INTERFACE:
  - RS485 serial communication with Modbus–RTU protocol
  - Analogue output configurable to Vrms, Irms, Watt (bi-directional), cosΦ
- ▶ Insertion: single phase, Aron (three-phase with N.2 CT), four wires (three-phase with N.3 CT)
- ▶ Accuracy: 0,5% (S203TA), 0,2% (S203T)
- ▶ Galvanic isolation @ 3,75 KV
- ▶ Din rail mounting
- ▶ Power supply: 10..40 Vdc, 19..28 Vac



## TECHNICAL SPECIFICATIONS

### S203T / S203TA - Triple-Phase Network Analyzer / RS485 Modbus



#### SERIAL LINE ACCESSORIES

- **K107A** – RS485 ↔ RS485 isolator repeater
- **K107B** – RS232 ↔ RS485 converter
- **K107USB (S107USB)** – USB ↔ RS485 converters din rail mounting or portable version (S107USB)

#### GENERAL FEATURES

<b>Power supply</b>	10÷40Vdc, 19÷28 Vac
<b>Channels</b>	single phase, Aron (three-phase with N.2 CT), four wires (three-phase with N.3 CT)
<b>Accuracy</b>	- 0,5% (S203TA) - 0,2% (S203T)
<b>Status indicators</b>	- Power - Fail - Communication on Rs485
<b>Galvanic Isolation</b>	- Input//Power supply and Input/Output at 3750 Vac - others at 1.500 Vac
<b>Hot swapping</b>	Yes
<b>Power consumption</b>	max 2,5 W
<b>Protections for inputs</b>	Against Surges: up to 4kV
<b>Humidity</b>	30..90% a +40°C (not condensing)
<b>Response time</b>	400 ms

#### INPUT

- Voltage:** max 600 Vac, 50-60 Hz
- Current:** 5 Arms (S203TA), 100mA from CT (S203T)
- **Single phase**
- **Aron** (three phase with N.2 CT)
- **Four wires** (three-phase with N.3 CT)

#### ORDER CODE

##### Cod.

-S203T (input 100mA, from CT)

-S203TA (input 5A)

##### Accessories & Software

-TA15: Current transformer (CT) - 15A / 100 mA

-TA25: Current transformer (CT) - 25A / 100 mA

-TA100: Current transformer (CT) - 100A / 100mA

**Z-NET3** - configuration software downloading from [www.seneca.it](http://www.seneca.it)


<b>Design</b>	Terminal housing for mounting on 35 mm DIN 46277
<b>Data memory</b>	EEPROM for all configuration data; storage time: 10 years.
<b>DIP Switch</b>	- Address setting - Baud rate setting - Selection of insertion type - Selection of 3 phase o 1 phase - Output
<b>Enclosure</b>	"V0" self-extinguishing glass filled nylon case
<b>Dimensions</b>	105 x 89 x 60 mm (w x h x d)
<b>Weight</b>	About 300 g
<b>Operating temperature</b>	-10..+65 °C
<b>Connections</b>	Removables 3- way screw terminals, 5,08 mm
<b>IP Protection</b>	IP 20
<b>Standards</b>	EN61000-6 EN61010-1 EN60742
<b>Approvals</b>	CE

#### INTERFACE / OUTPUT


- Rs485 Modbus RTU slave:** 1200...115200 baud rate
- Analogue output:** corresponding at Vrms, Irms, Watt, cosφ

## DIMENSIONS AND INSTALLATION



#### Power supply




#### RS485



#### Inputs

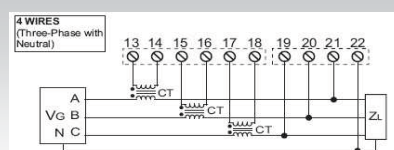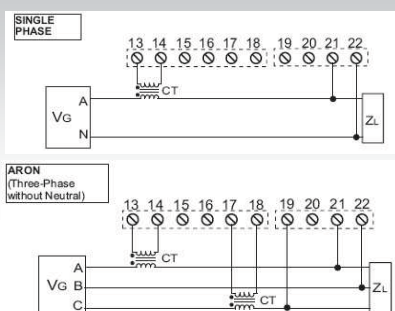

#### Outputs





REGISTRER MACHINE ID	Description Bit [15:8] contain the module's ID: 41. Bit [7:0] contain the firmware's external revision	IND. 40001	R/W R
CHECK_TA	Kind of CT used: passive CT or compensated CT	40016	R/W
Bit [15:1] Bit 0	Not used. Select the kind of CT used: 0: Passive CT with SA output. 1: Compensated CT, which has no phase error. Precision class of the instrument is given by (CT class)+0,3.		
PHASE_RETR	Select the phase on which the analog output will transmit.	40017	R/W
Bit [15:0]	Select the phase on which the analog output will transmit the quantity selected: 0: Phase A (default for single-phase). 1: Phase B. 2: Phase C. All other values: Three phase value (default three-phase).		
I PRIM_FL_MSW	Select the rated current of CTs in floating point (most significant word).	40018	R/W
Bit [15:0]	Select the rated current of the CTs connected to the instrument in floating point format. This register influences floating point value of: Irms, Active power, Apparent Power, Reactive Power and Energy (both single and three-phase). It doesn't influence normalised values (0 - 10000) and transmitted output. Default: 1000,0.		
I PRIM_FL_LSW	Select the rated current of CTs in floating point (least significant word).	40019	R/W
MINOUT_FL_MSW	Value of the quantity to transmit which gives the minimum retransmitted output (floating point format, most significant word).	40020	R/W
Bit [15:0]	Value of the quantity to transmit (defined via DIP-switch and phase selected via PHASE_RETR register, 40017) which gives the minimum value (0%) of the transmitted output. The value is expressed in floating point format (most significant word) and therefore it must be expressed in the corresponding measurement unit of the quantity chosen (V for Vrms, mA for Irms, W for Watt). Default: 0,0.		

**SENECA** MI001455-I-E ENGLISH - 9/16

MINOUT_FL_LSW	Value of the quantity to transmit which gives the minimum retransmitted output (floating point format, least significant word).	40021	R/W
MAXOUT_FL_MSW	Value of the quantity to transmit which gives the maximum retransmitted output (floating point format, most significant word).	40022	R/W
Bit [15:0]	Value of the quantity to transmit (defined via DIP-switch and phase selected via PHASE_RETR register, 40017) which gives the maximum value (100%) of the transmitted output. The value is expressed in floating point format (most significant word) and therefore it must be expressed in the corresponding measurement unit of the quantity chosen (V for Vrms, mA for Irms, W for Watt). Default: 600,0.		
MAXOUT_FL_LSW	Value of the quantity to transmit which gives the maximum retransmitted output (floating point format, least significant word).	40023	R/W
CHECK_FREQ	Enables measurement errors compensation of Active Power and Energy caused by network frequency variations.	40024	R/W
Bit [15:1]	Not used		
Bit 0	Errors compensation caused by network frequency variations: 1: If network frequency is not stable at 50 Hz or 60 Hz, or has consistent variations (> 30 mHz), this register corrects the measurement of Power and Energy. The measurements of Vrms and Irms are not influenced by this setting.		
ADDR_PARITY	Register for the setting of the module's address and parity control.	40025	R/W
Bit [15:8]	Set the module's address. Allowed values from 0x00 a 0xFF (decimal values in the interval of 0-255). Default: 1.		
Bit [7:0]	Set the type of parity control: 00000000 : No parity (NONE) 00000001 : Even parity (EVEN) 00000010 : Odd parity (ODD)		
BAUDR_ANSDEL	Register for the setting of the Baud rate and the response delay time in characters.	40026	R/W
Bit [15:8]	Set the serial communication speed value (Baudrate):		

**SENECA** MI001455-I-E ENGLISH - 10/16

	00000000 (0x00): 4800 Baud 00000001 (0x01): 9600 Baud 00000010 (0x02): 19200 Baud 00000011 (0x03): 38400 Baud 00000100 (0x04): 57600 Baud 00000101 (0x05): 115200 Baud 00000110 (0x06): 1200 Baud 00000111 (0x07): 2400 Baud		
Bit [7:0]	Set the response delay time in characters that represents the number of pauses of 6 characters each to be entered between the end of the Rx message and the start of the Tx message. Default: 0		
RESET_ZERO ENERGY	Reset instrument and zero setting energy	40131	R/W
Bit [15:0]	-Writing 0x1234 resets (boots) instrument. -Writing 0x1000, resets active energy accumulation in all three phases (unless ERR led is blinking).		
STATUS	Status Register	40133	R
Bit 15	1: Error saving Active Energy value.		
Bit [14:7]	Not Used.		
Bit 6	1: Phase B and C are reverse-connected		
Bit 5	1: Voltage on phase C is > 40 V therefore measurements on phase C are correctly acquired.		
Bit 4	1: Voltage on phase B is > 40 V therefore measurements on phase B are correctly acquired.		
Bit 3	1: Voltage on phase A is > 40 V therefore measurements on phase A are correctly acquired.		
Bit [2:0]	Non utilizati.		
VRMS_A_FL_MSW	Single phase or phase A Vrms measurement (floating point, most significant word) in Volt	40135	R
VRMS_A_FL_LSW	Single phase or phase A Vrms measurement (floating point, least significant word) in Volt	40136	R
VRMS_B_FL_MSW	Phase B Vrms measurement (floating point, most significant word) in Volt	40137	R
VRMS_B_FL_LSW	Phase B Vrms measurement (Floating point, least significant word) in Volt	40138	R
VRMS_C_FL_MSW	Phase C Vrms measurement (floating point, most significant word) in Volt	40139	R
VRMS_C_FL_LSW	Phase C Vrms measurement (Floating point, least significant word) in Volt	40140	R

**SENECA** MI001455-I-E ENGLISH - 11/16

VRMS_3PH_FL_MSW	Mean Vrms in Volt: $(V_A+V_B+V_C)/3$ (floating point, most significant word)	40141	R
VRMS_3PH_FL_LSW	Mean Vrms in Volt: $(V_A+V_B+V_C)/3$ (floating point, least significant word)	40142	R
IRMS_A_FL_MSW	Single phase or phase A Irms measurement (floating point, most significant word) in mA	40143	R
IRMS_A_FL_LSW	Single phase or phase A Irms measurement (floating point, least significant word) in mA	40144	R
IRMS_B_FL_MSW	Phase B Irms measurement (floating point, most significant word) in mA.	40145	R
IRMS_B_FL_LSW	Phase B Irms measurement (floating point, least significant word) in mA.	40146	R
IRMS_C_FL_MSW	Phase C Irms measurement (floating point, most significant word) in mA.	40147	R
IRMS_C_FL_LSW	Phase C Irms measurement (Floating point, least significant word) in mA.	40148	R
IRMS_3PH_FL_MSW	Mean Irms in mA: $(I_A+I_B+I_C)/3$ (floating point, most significant word).	40149	R
IRMS_3PH_FL_LSW	Mean Irms in mA: $(I_A+I_B+I_C)/3$ (floating point, least significant word).	40150	R
WATT_A_FL_MSW	Single phase or phase A Power measurement (floating point, most significant word) in W	40151	R
WATT_A_FL_LSW	Single phase or phase A Power measurement (floating point, least significant word) in W	40152	R
WATT_B_FL_MSW	Phase B Power measurement (floating point, most significant word) in W	40153	R
WATT_B_FL_LSW	Phase B Power measurement (floating point, least significant word) in W	40154	R
WATT_C_FL_MSW	Phase C Power measurement (floating point, most significant word) in W	40155	R
WATT_C_FL_LSW	Phase C Power measurement (floating point, least significant word) in W	40156	R
WATT_3PH_FL_MSW	Three phase Power in W: $P_A+P_B+P_C$ (floating point, most significant word)	40157	R
WATT_3PH_FL_LSW	Three phase Power in W: $P_A+P_B+P_C$ (floating point, least significant word)	40158	R
VAR_A_FL_MSW	Single phase or phase A Reactive Power in VAR (floating point, most significant word).	40159	R
VAR_A_FL_LSW	Single phase or phase A Reactive Power in VAR (floating point, least significant word).	40160	R

**SENECA** MI001455-I-E ENGLISH - 12/16

VAR_B_FL_MSW	Phase B Reactive Power in VAR (floating point, most significant word).	40161	R
VAR_B_FL_LSW	Phase B Reactive Power in VAR (floating point, least significant word).	40162	R
VAR_C_FL_MSW	Phase C Reactive Power in VAR (floating point, most significant word).	40163	R
VAR_C_FL_LSW	Phase C Reactive Power in VAR (floating point, least significant word).	40164	R
VAR_3PH_FL_MSW	Reactive power three-phase in VAR: $Q_A+Q_B+Q_C$ (floating point, most significant word).	40165	R
VAR_3PH_FL_LSW	Reactive power three-phase in VAR: $Q_A+Q_B+Q_C$ (floating point, least significant word).	40166	R
VA_A_FL_MSW	Single phase or phase A Apparent Power in VA (floating point, most significant word).	40167	R
VA_A_FL_LSW	Single phase or phase A Apparent Power in VA (floating point, least significant word).	40168	R
VA_B_FL_MSW	Phase B Apparent Power in VA (floating point, most significant word).	40169	R
VA_B_FL_LSW	Phase B Apparent Power in VA (floating point, least significant word).	40170	R
VA_C_FL_MSW	Phase C Apparent Power in VA (floating point, most significant word).	40171	R
VA_C_FL_LSW	Phase C Apparent Power in VA (floating point, least significant word).	40172	R
VA_3PH_FL_MSW	Apparent Power Three-phase in VA: $S_A+S_B+S_C$ (floating point, most significant word).	40173	R
VA_3PH_FL_LSW	Apparent Power Three-phase in VA: $S_A+S_B+S_C$ (floating point, least significant word).	40174	R
cosφ_A_FL_MSW	Single phase or phase A Power factor (floating point, most significant word)	40175	R
cosφ_A_FL_LSW	Single phase or phase A Power factor (floating point, least significant word)	40176	R
cosφ_B_FL_MSW	Phase B Power factor $\cos\phi$ (floating point, most significant word).	40177	R
cosφ_B_FL_LSW	Phase B Power factor $\cos\phi$ (floating point, least significant word).	40178	R
cosφ_C_FL_MSW	Phase C Power factor $\cos\phi$ (floating point, most significant word).	40179	R




**SENECA** MI001455-I-E ENGLISH - 13/16

cosφ_C_FL_LSW	Phase C Power factor $\cos\phi$ (floating point, least significant word).	40180	R
cosφ_3PH_FL_MSW	$\cos\phi$ three phase: WATT 3PH / VA 3PH (floating point, most significant word).	40181	R
cosφ_3PH_FL_LSW	$\cos\phi$ three phase: WATT 3PH / VA 3PH (floating point, least significant word).	40182	R
FREQ_FL_MSW	Frequency measurement in Hz (floating point, most significant word).	40183	R
FREQ_FL_LSW	Frequency measurement in Hz (floating point, least significant word).	40184	R
ENER_A_FL_MSW	Single phase or phase A Active Energy in Wh (floating point, most significant word).	40185	R
ENER_A_FL_LSW	Single phase or phase A Active Energy in Wh (floating point, least significant word).	40186	R
ENER_B_FL_MSW	Phase B Active Energy in Wh (floating point, most significant word).	40187	R
ENER_B_FL_LSW	Phase B Active Energy in Wh (floating point, least significant word).	40188	R
ENER_C_FL_MSW	Phase C Active Energy in Wh (floating point, most significant word).	40189	R
ENER_C_FL_LSW	Phase C Active Energy in Wh (floating point, least significant word).	40190	R
ENER_3PH_FL_MSW	Active energy three phase in Wh: $E_A+E_B+E_C$ (floating point, most significant word).	40191	R
ENER_3PH_FL_LSW	Active energy three phase in Wh: $E_A+E_B+E_C$ (floating point, least significant word).	40192	R
VRMS_A_INT	Single phase or phase A Vrms normalised 0..+10000.	40193	R
VRMS_B_INT	Phase B Vrms normalised 0..+10000.	40194	R
VRMS_C_INT	Phase C Vrms normalised 0..+10000.	40195	R
VRMS_3PH_INT	Mean Vrms $(V_A+V_B+V_C)/3$ normalised 0..+10000.	40196	R
IRMS_A_INT	Single phase or phase A Irms normalised 0..+10000.	40197	R
IRMS_B_INT	Phase B Irms normalised 0..+10000.	40198	R
IRMS_C_INT	Phase C Irms normalised 0..+10000.	40199	R

**SENECA** MI001455-I-E ENGLISH - 14/16

IRMS_3PH_INT	Mean Irms $(I_A+I_B+I_C)/3$ normalised 0..+10000.	40200	R
WATT_A_INT	Single phase or phase A Active power normalised 0..+10000.	40201	R
WATT_B_INT	Phase B Active power normalised 0..+10000.	40202	R
WATT_C_INT	Phase C Active power normalised 0..+10000.	40203	R
WATT_3PH_INT	Three phase active power $P_A+P_B+P_C$ normalised 0..+10000.	40204	R
VAR_A_INT	Single phase or phase A Reactive Power normalised -10000..+10000.	40205	R
VAR_B_INT	Phase B Reactive Power normalised -10000..+10000.	40206	R
VAR_C_INT	Phase C Reactive Power normalised -10000..+10000.	40207	R
VAR_3PH_INT	Three phase reactive power $Q_A+Q_B+Q_C$ normalised -10000..+10000.	40208	R
VA_A_INT	Single phase or phase A Apparent Power normalised 0..+10000	40209	R
VA_B_INT	Phase B Apparent Power normalised 0..+10000	40210	R
VA_C_INT	Phase C Apparent Power normalised 0..+10000	40211	R
VA_3PH_INT	Apparent power three phase $S_A+S_B+S_C$ normalised 0..+10000.	40212	R
cosφ_A_INT	Single phase or phase A power factor $\cos\phi$ normalised: -10000..+10000.	40213	R
cosφ_B_INT	Phase B power factor $\cos\phi$ normalised: -10000..+10000.	40214	R
cosφ_C_INT	Phase C power factor $\cos\phi$ normalised: -10000..+10000.	40215	R
cosφ_3PH_INT	Three phase power factor $\cos\phi$ -WATT/VA normalised: -10000..+10000	40216	R

**SENECA** MI001455-I-E ENGLISH - 15/16

RETRANS_INT	Visualize the quantity to transmit normalised 0..+10000, scaled to min and MAX values set.	40217	R
Bit [15:0]	Value of the quantity to transmit normalised 0..+10000, scaled to the minimum and maximum threshold set in registers MINOUT_FL (40020-21) e MAXOUT_FL (40022-23) respectively. 0: If the floating point value of the quantity to transmit is less than MINOUT_FL (40020-21) 10000: if the floating point value of the quantity to transmit is equal to MAXOUT_FL (40022-23). In the intermediate points has a linear behaviour. The value of the register follows linearly the quantity to transmit until maximum value set to 11000, saturating over this value.		
 <p>Disposal of Electrical &amp; Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs)</p> <p>This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you purchased this product.</p> <p>(This document is property of SENECA srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice Content of this documentation is subject to periodical revision.)</p>			
 		<b>SENECA</b> s.r.l. Via Germania, 34 - 35127 - Z.I. CAMIN - PADOVA - ITALY Tel. +39.049.8705355 - 8705359 - Fax +39.049.8706287 e-mail: info@seneca.it - www.seneca.it ISO9001-2000	

**SENECA** MI001455-I-E ENGLISH - 16/16